

## EXY-17R6-CBSC

## Cat Back Stainless/Carbon Exhaust Yamaha R6 2008-2017

### PARTS LIST

- Carbon Fiber Silencer 1




**<<<<< IT IS RECOMMENDED THAT THIS PRODUCT BE INSTALLED BY A QUALIFIED TECHNICIAN >>>>>**

- 1) Remove the lower fairing.
- 2) Remove the Noise Reduction Valve cables from the exhaust muffler. Remove the Noise Reduction Valve cable clamp from the right side rearset.
- 3) Remove the exhaust muffler. You will reuse the exhaust clamp and gasket.
- 4) Remove the bracket holding the rear brake reservoir to the frame.
- 5) Remove the two bolts holding the Noise Reduction Valve motor bracket to the frame. Remove the Noise Reduction Valve motor assembly by pulling it out from the right side of the motorcycle.
- 6) Disconnect the Noise Reduction Valve control cables from the Noise Reduction Valve motor. You must leave the Noise Reduction Valve motor electrical connector in place or an error code 17 will display on the LCD screen on the dash.
- 7) Reinstall the Noise Reduction Valve motor assembly or the Graves EXUP Eliminator (Graves part # ELY-U-EX)
- 8) Reinstall the rear brake reservoir bracket.

- 9) You will use the stock bolt and washer to mount the silencer. Remove the hat spacer from the inside (**photo 1**). Replace the hat spacer from the outside (**photo 2**) **Leave the bolt loose for now.**



**Photo 1**

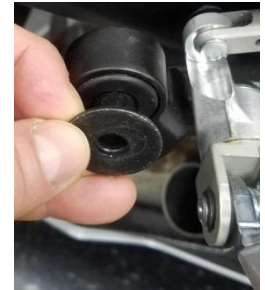

**Photo 2**

- 10) Install the new slip-on onto the stock exhaust system. The mounting tab goes behind the footpeg mount. Use the stock exhaust clamp to secure. **Leave the clamp loose for now.**
- 11) Torque both exhaust clamp and the 8mm mounting bolt/nut (20 Nm / 14 ft lbs).
- 12) Reinstall everything onto the bike checking clearances to the bodywork. Reinstall/realign the exhaust system to achieve clearances.
- 13) Before starting your motorcycle, be sure to clean any finger prints or dirt from your exhaust.
- 14) Start the engine and check again for proper installation and/or clearance.